

DESCO INDUSTRIES INC.

3651 WALNUT AVENUE
CHINO, CA 91710

PHONE (909)627-8178
FAX (909)627-7449

Description:

TEST PROCEDURE FOR THE JR OVER HEAD

Dwg by: EDMUNDO.E Date: 9/14/2000 File: X-JCE-09

JCE-09

JR. IONIZER CALIBRATION

STEP 1: YOU WILL FIND TWO POTENTIOMETERS THE ONE ON THE LEFT IS FOR THE ALARM; THE ONE ON THE RIGHT IS FOR BALANCE. THE SWITCH ABOVE THE POTNTIOMETERS IS FOR AUDIBLE ON/OFF.

STEP 2: ADJUST THE ALARM POTENTIOMETERS CLOCKWISE UNTIL THE ALARM STOPS BEEPING ONE ON THE RIGHT IS FOR BALANCE. THE SWITCH ABOVE THE POTNTIOMETERS IS FOR AUDIBLE ON/OFF.

NOTE:

- * TAPE MODULES BEFORE PUTTING ON COVER.
- * SET ON HIGH SPEED TO 10v
- * SET ON LO SPEED 1-5v
- * ALARM MUST BEEP AT 200v
- * ALWAYS ZERO YOUR CHARGE PLATE

